


SOLE

INDOOR TECHNICAL BLINDS





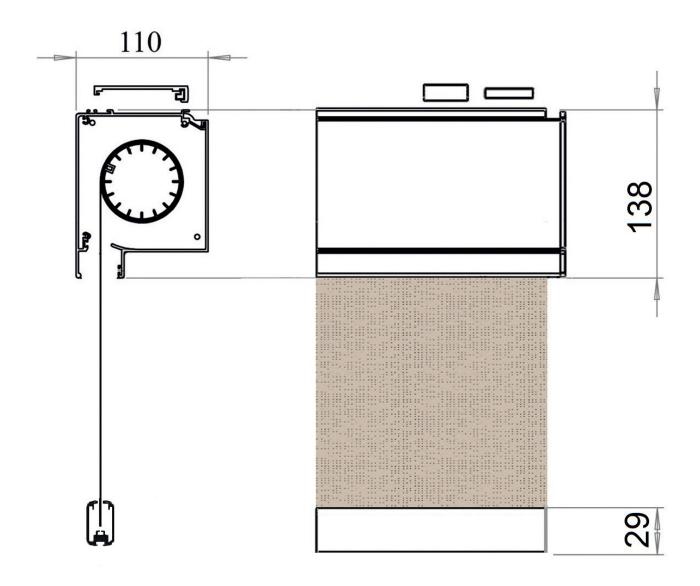





INDOOR ROLLER BLIND WITH ALUMINIUM BOX.

THE FABRIC EXITS FROM THE BACK TO PROVIDE GREATER ADHERENCE TO THE GLASS SURFACE AND OPTIMISE INTERNAL SPACES.

GEAR OR MOTOR CONTROL

MAIN FEATURES:


MOUNT

DIRECT FRONT OR CEILING MOUNT WITH SCREWS, OR CEILING MOUNT WITH BRACKETS.



Box

Inspectable aluminium box Venere and aluminium roller tube \emptyset 63 mm. up to 4 m. wide Inspectable aluminium box Vulcano and iron tube \emptyset 80 up to 5 m. wide 95 Venere and 110 Vulcano boxes are available in a round or squared version. Metal end caps are coated in the same colour as aluminium structure.

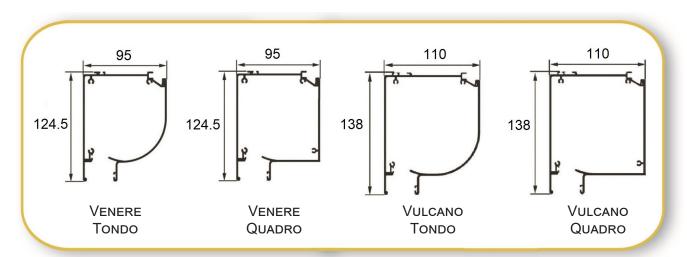



SOLE













END CAPS FOR LATERAL FIXING

ON REQUEST, IT IS POSSIBLE TO ORDER END CAPS FOR A LATERAL FIXING.

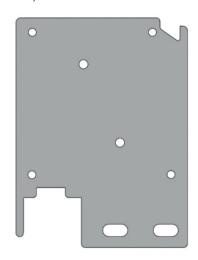


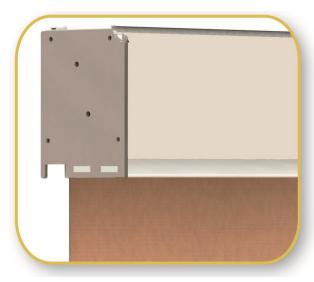


EASY MAINTENANCE SYSTEM

ROLLER TUBE AND BOTTOM BAR WITH ZIP HOUSING.


ZIP IS WELDED ON 2 FABRICS SIDES. IT IS VERY IMPORTANT BECAUSE IT SPEEDS UP ASSEMBLY OPERATIONS AS ANY MAINTENCE/FABRIC REPLACEMENT.

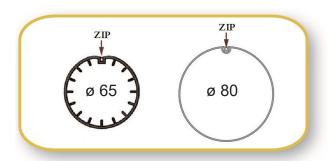



ROLLER RELEASE SYSTEM

In light versions, using Venere or Vulcano box, roller tube can be removed without having to dismantle the blind.

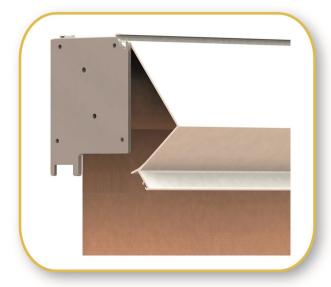











SOLE


CONTROL

SOLE CAN BE GEAR OR MOTOR OPERATED.

GEAR

GEAR OPERATION WITH FIXED ROD (A) OR REMOVABLE MAGNET ROD (B).

IN CASE OF MAGNETIC ROD, UNLESS OTHERWISE SPECIFIED ON ORDER FORM, ONE HANDLE WILL BE SUPPLIED FOR EACH ORDER.

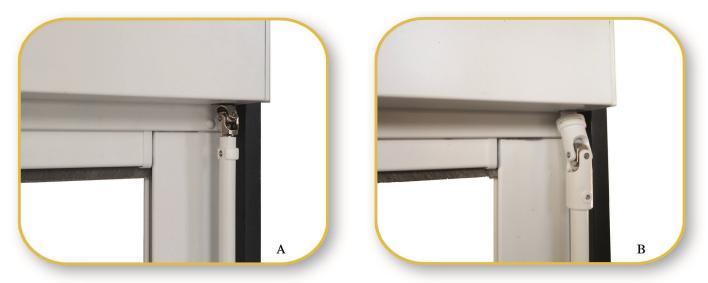

MOTOR

MOTOR OPERATION SHOULD BE WITH WIRED DRIVES OR ELECTRONIC SETTING WITH REMOTE CONTROL. AVAILABLE MOTORS ARE CHERUBINI, SOMFY AND GAPOSA.

FABRICS

VARIOUS FABRIC ARE USED IN SOLE SYSTEM: SHADING OR BLACKOUT FABRIC.

WELDING

ALL FABRICS ARE HORIZONTALLY WELDED.

COATING AND SCREWS

ALL ALUMINIUM PROFILES UNDERGO AN OPEN-PORE ANODIC OXIDATION PRETREATMENT.

THEN, THE POWDER COATING ON THE ALUMINIUM HAS HIGHT MECHANICAL PROPERTIES AND INCREASE PROTECTION AGAINST CORROSION AND AGGRESSIVE ATMOSPHERE.

STAINLESS STEEL SCREWS.



GARATTONI DARIO DI R.I.

Via del Salice,8 - 47822 Santarcangelo di Romagna (Rn) Tel. 0039.0541.625648 www.garattonidario.com - info@garattonidario.com





